




Note: Installation of all electrical equipment must be performed by qualified personnel. We highly recommend a licensed industrial electrician. All installations must comply with all applicable Federal, State and Local Codes.

Note: Always Energize Phase Converter - Before - You Energize Machine Load.

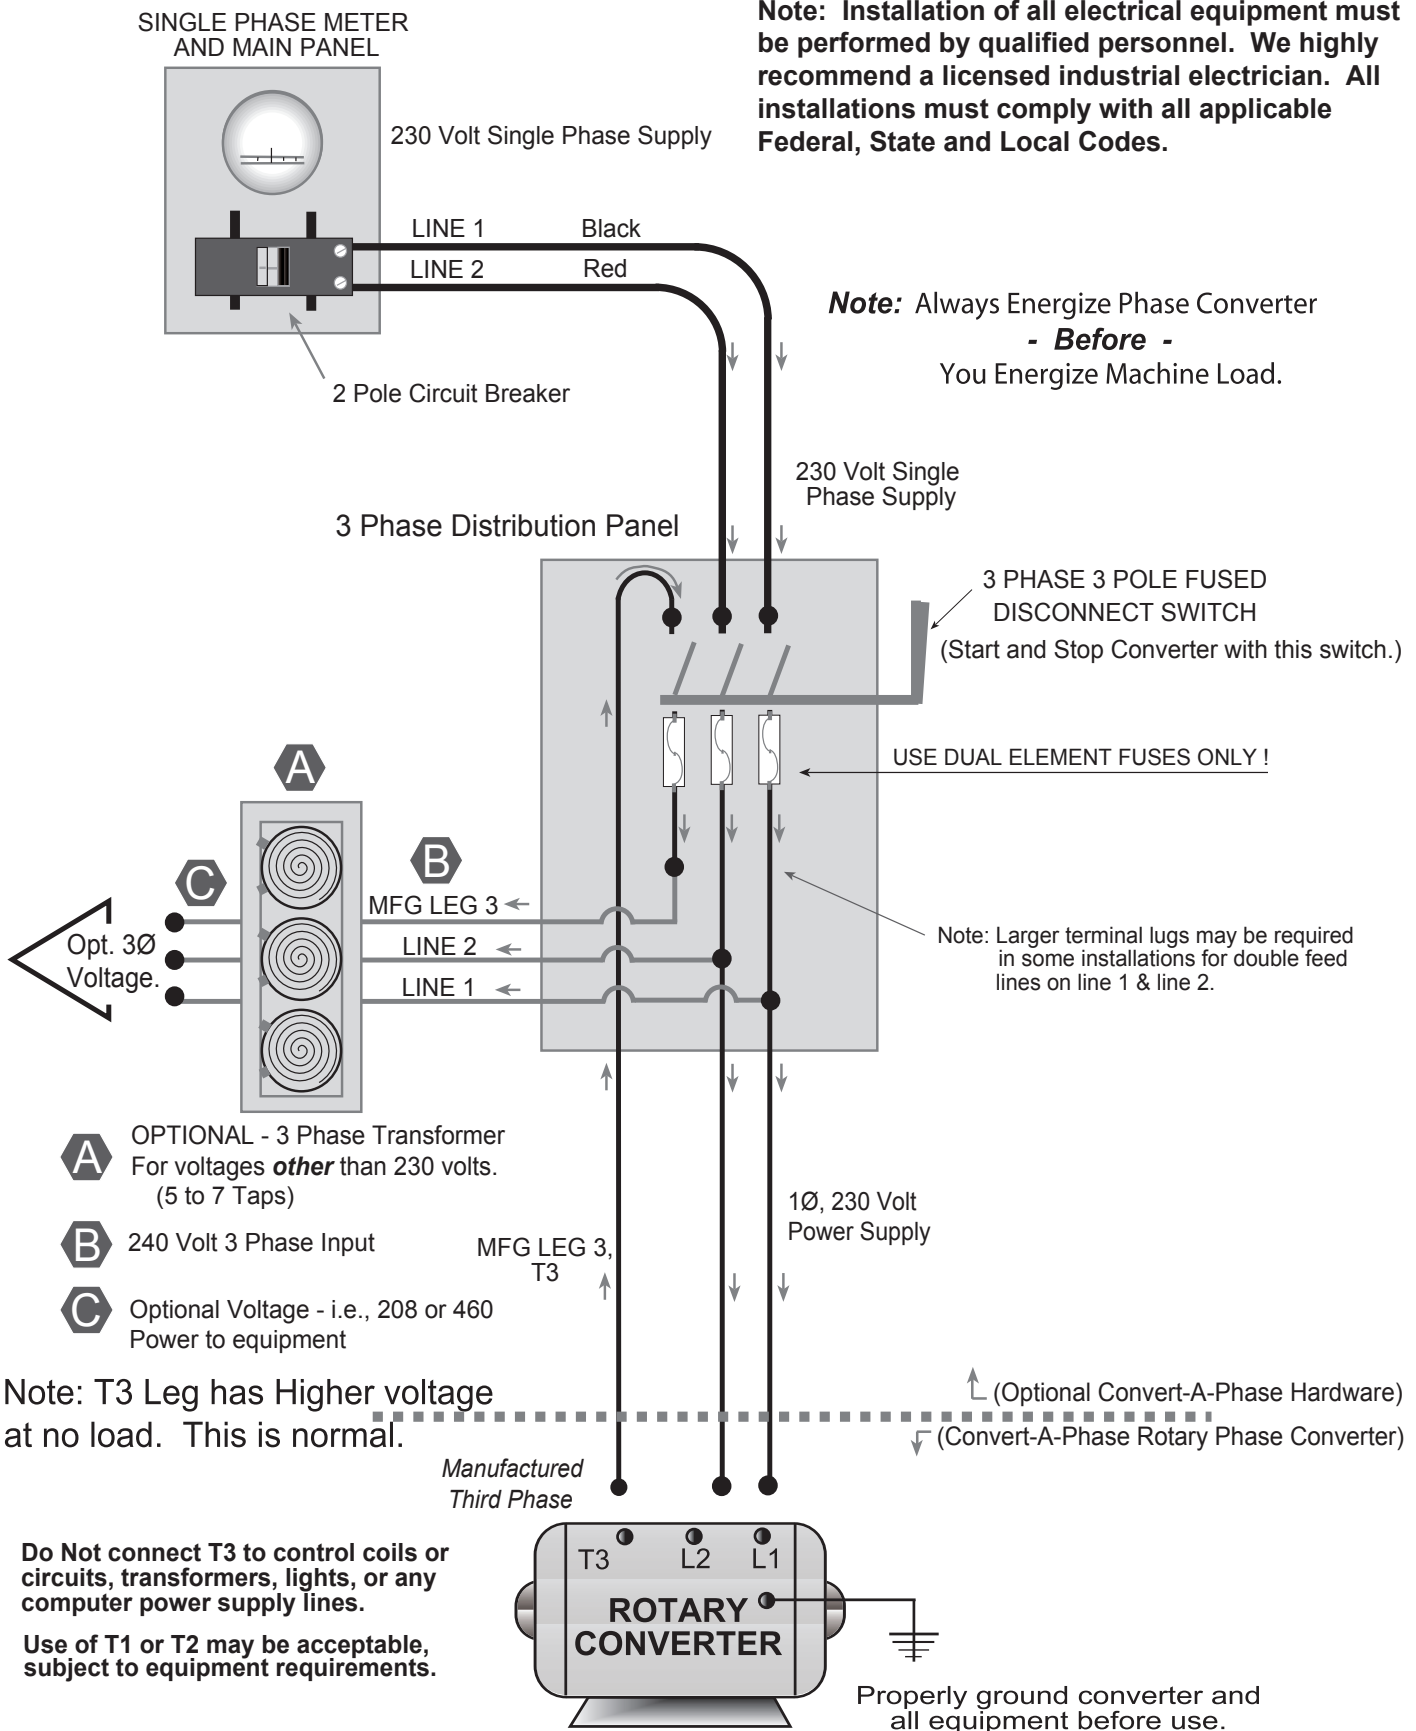

- A** OPTIONAL - 3 Phase Transformer For voltages **other** than 230 volts. (5 to 7 Taps)
- B** 240 Volt 3 Phase Input
- C** Optional Voltage - i.e., 208 or 460 Power to equipment

Note: T3 Leg has Higher voltage at no load. This is normal.

Do Not connect T3 to control coils or circuits, transformers, lights, or any computer power supply lines.
Use of T1 or T2 may be acceptable, subject to equipment requirements.

Properly ground converter and all equipment before use.